


Sprayer Table Demo

Directions:

1. Plug the drainage holes with the **two plugs** kept in the tackle box.
2. Connect Boom 1 and Boom 2, and place booms on **support rods**.
3. Connect **two hoses** to the outermost spot on the booms. Two suction hoses will remain in the toolbox to collect water.
4. Connect pressure gauges, lamps, and **spray nozzles**.
5. For **splash reduction**, place clear plastic panels on each side of the table. The black sheet will velcro to the trunk lid and can be clipped to the clear plastic panels. The clips are stored in the tackle box.
6. Fill the toolbox with approximately 4-5 inches of water. Or, you may fill two buckets with water, and place the suction hoses into the buckets.
7. The pressure control should be placed on the edge of the toolbox. **Do not exceed 100 psi.**

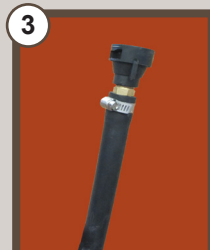


Connect **hoses** to the end spot on each boom




"on"


"off"

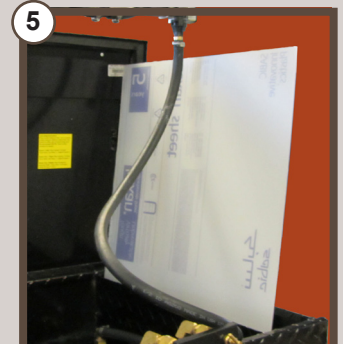

Use plastic sheets for **splash reduction**, black sheet velcros to lid

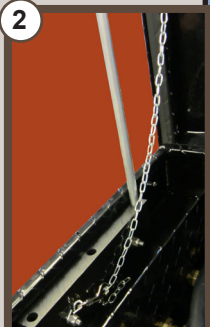

Placing the **support rods** in the last hole reduces splash

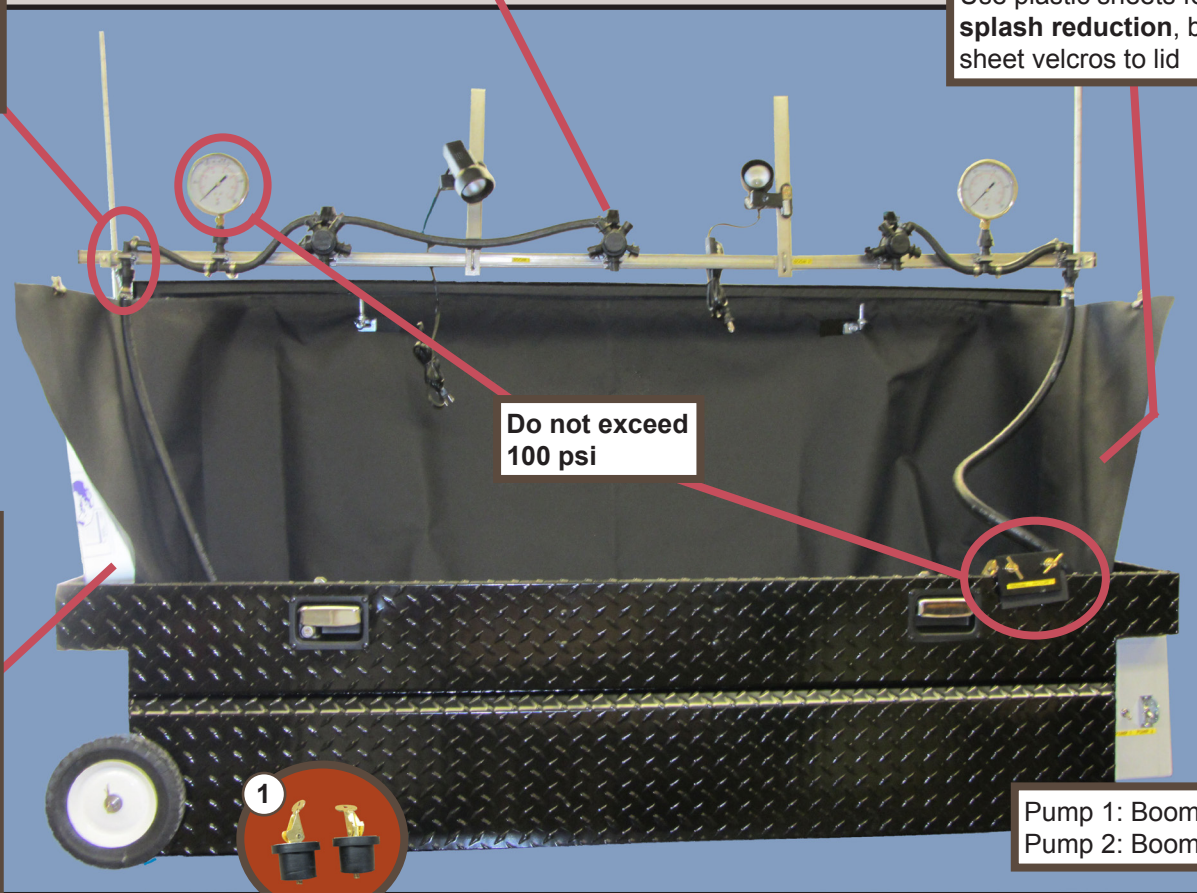

Plugs are stored in the tackle box

Pump 1: Boom 1
Pump 2: Boom 2



Pesticide Safety Education Program

Ohio State University Extension

(614) 292-4070

pested@osu.edu

<http://pested.osu.edu>

To borrow the spray table, contact Emily Schaefer

schaefer.322@osu.edu

(614) 292-4070

Important Notes:

- Do not exceed a pressure of 100 psi.
- Do not turn on the sprayer demo machine without water.
- Do not use in freezing temperatures without antifreeze.